

## Recommended Options for WinPond

The following table lists the recommended values for the “Options” settings in WinPond. Screen shots are also shown on the next page. To check and set these values, select “Tools -> Options” from the WinPond menu or press F2. If you click the “Defaults” button on the Options window, the items shown below in **bold italic** are the only ones that would need to be changed to match the recommended values. Once values are set, click OK to save them.

OPTION	RECOMMENDED VALUE
<b>General tab</b>	
Data Path:	<b>O:\</b>
Show File Save Dialog when F10 is Pressed	checked
Footer for Cover Page	<b><i>User's office name and address</i></b>
<b>Drawdown tab</b>	
Feet above inlet	0.0
Percentage of Storage drained	85.0
Minimum flow in cu.ft./sec.	0.10
<b>Auxiliary Spillway tab</b>	
Auxiliary Spillway to top of dam (ft.)	2.00
Freeboard (ft.)	1.00
Minimum bottom width (ft.)	10.00
Maximum bottom width (ft.)	150.00
<b>Ground tab</b>	
Station Increment (ft.)	0.00
Repeat distances?	Yes
Offset for slope (ft.)	30.00
<b>Earthwork tab</b>	
Slopes	Constructed
Berm settles	No
Volume(s) Displayed in Report	Settled, Constructed
<b>Design tab</b>	
Orifice coefficient	0.71
Full Pipe Flow Required?	Yes
Stage Required Above the Principal Spillway Crest	
Minimum Stage (ft)	0.50
Max. Drainage Area (Acres)	20
Principal Routing Defaults	
Do not include flow for	Checked
principal spillway pipes smaller than	<b><i>10 inches</i></b>
Auxiliary Routing Defaults	
Do not include flow for	Checked
principal spillway pipes smaller than	10 inches

# Recommended Options for WinPond

## Screen shots of option settings

