


Excavate 2 to 3 inches below pipe grade. Then backfill with damp friable soil free from lumps and raked or graded to a true plane before placing C.M. Pipe. No compaction of bedding is required.

CORRUGATED OR SMOOTH METAL PIPE
PRINCIPAL SPILLWAY
BEDDING DETAIL

Note
Begin backfill immediately after pipe has been placed.

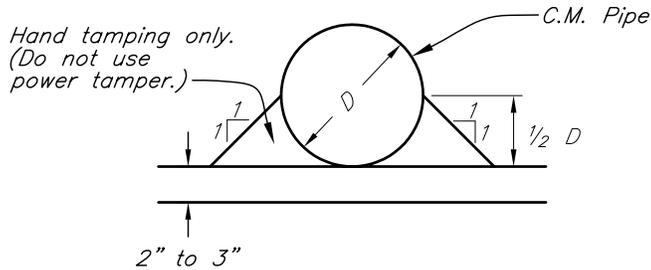

CORRUGATED OR SMOOTH METAL PIPE
PRINCIPAL SPILLWAY
BACKFILL DETAIL

STANDARD DWG. IA-1205

DATE July 2008 SHEET 1 OF 1



DETAILS OF CORRUGATED OR
SMOOTH METAL PIPE PRINCIPAL
SPILLWAY BEDDING AND BACKFILL

Designed _____ Date _____
Drawn _____
Checked _____
Approved _____

File Name _____
Drawing Name _____
Sheet of _____