


SurvCE – SurvCADD/SurvCom – Downloading & Uploading

1. Plug the handheld computer running SurvCE into the computer
2. Start SurvCE on the handheld computer
3. Go to the <File> tab in SurvCE
4. Tap <Data Transfer>
5. Tap <Carlson Transfer>
6. Set the data collector aside and turn to the desktop computer
7. Open SurvCADD or SurvCom
8. In SurvCADD go to the “COGO – Design” Module
9. Click on the “Tools” menu and then “Data Collectors”
10. Click on the “SurvCE/SurvStar/G2...” in the top left corner
The screen should look similar to the one below:

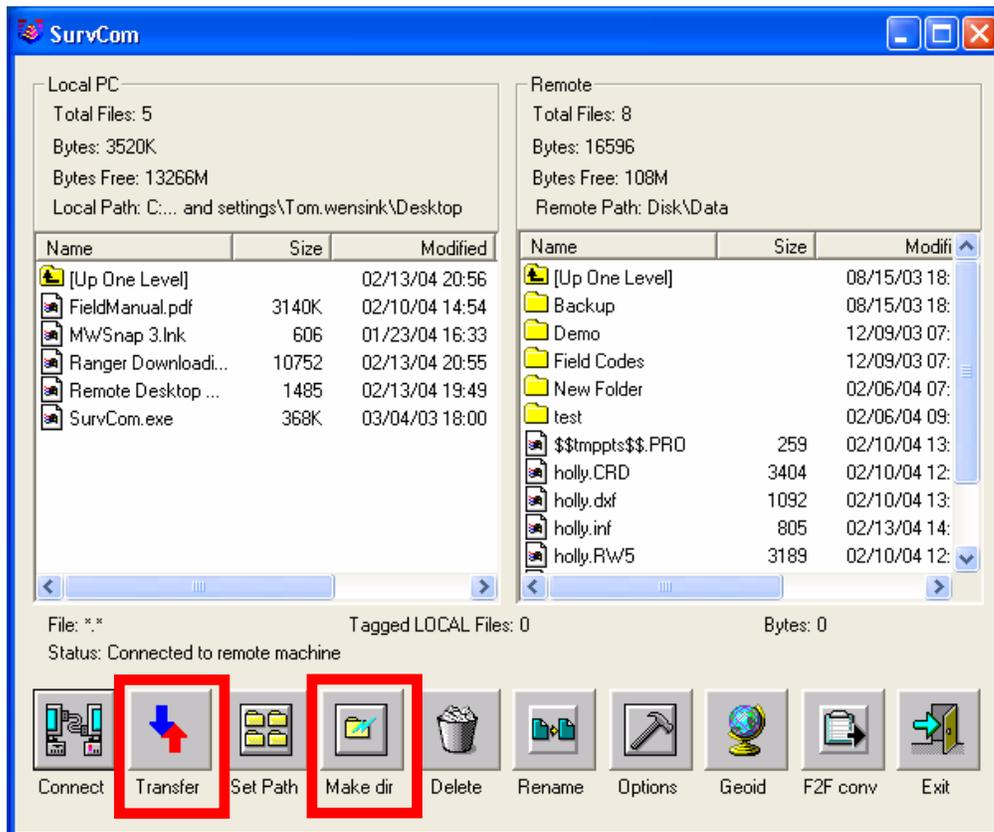

The list on the left is your local PC. The list on the right is on the data collector. You can navigate the directory structure like you would Window’s Explorer.

11. Navigate to desired job directory using the left side of the window.
Note: You can create new directories by pressing the <Make dir> button at the bottom
12. Highlight the files you want to download on the right (files could have .crd, .not, .rw5, .dxf, .inf extensions. The crd and rw5 are the most important)
13. Press <Transfer> at the bottom

The files have been copied over to your computer. Press <Exit> to close the SurvCom. Tap <Close> on the data collector, exit SurvCE and turn off the data collector.

You can upload by reversing the process from steps 11 through 13. Highlight the files on the local computer and press <Transfer> to upload them to the data collector.