

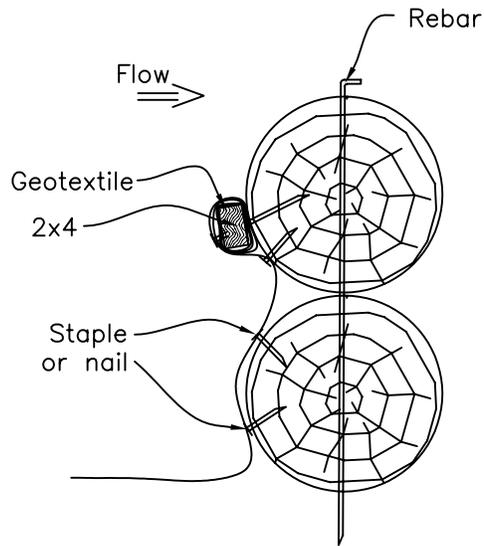


Install live clumps and live cuttings into adjacent protection during construction. Extend to below stream bed.

Use logs that are straight, uniform diameter and free of rot, disease or insect infestation.

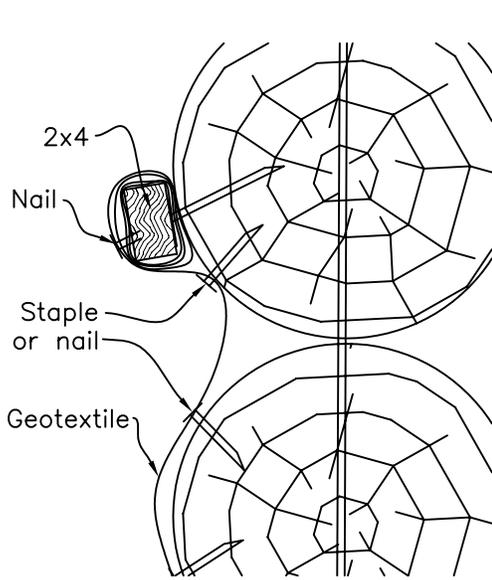

Drill 1 1/8" dia. hole and drive #8 rebar through. Bend end at top.

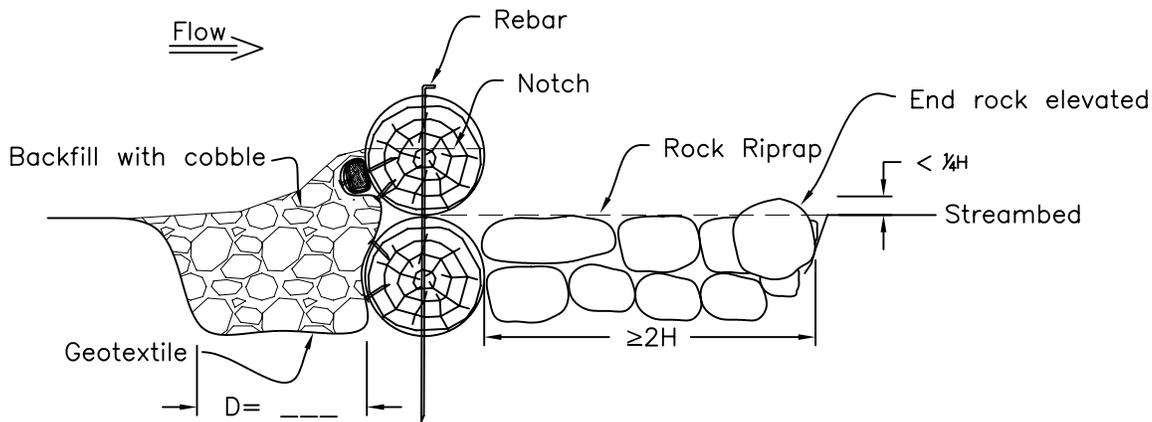

Conceptual Plan - Not for Construction

Drawings not to scale



LOG CHECK DAM
-SMALL STREAM
(Less Than 12ft.)

J. Fripp, K. Worster	Date	File Name
Designed C. Hoag	08/06	Small-Stream.dwg
Drawn Juan Renteria	08/06	Drawing Name
Checked		Small Stream
Approved		08/25/06
		Sheet 1 of 1