



STEP 1

- Collect and soak wattling. Leave side branches. Wattling should be ¼ to 1in diameter, flexible, and 4 to 20 feet long.
- Collect and soak live cuttings. The cuttings should be 2 to 4 inch diameter and 3 to 5ft long.
- Excavate a trench 1 to 2 feet deep as shown on the plans.

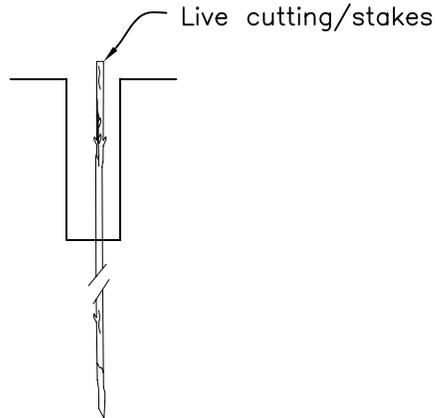

STEP 2

- Install live cuttings/stakes into the invert of the trench. The minimum depth should be 1ft. The tops should extend at least 2 inches above top of trench.
- Space stakes along a line at 1 to 2ft centers.

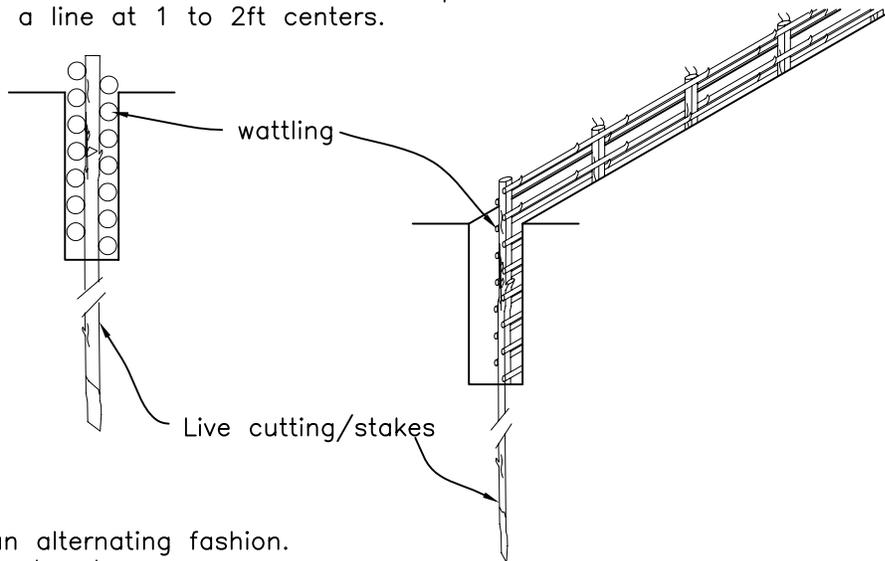

STEP 3

- Weave wattling in an alternating fashion.
- Press down on each strand.
- Backfill trench and wash in soil.
- Trim as specified.

Conceptual Plan - Not for Construction

N.T.S.



Wattle

Designed	J. Fripp, K. Worster	Date	03/07
Drawn	J. Renteria	Date	03/07
Checked	_____		
Approved	_____		

File Name	Wattle.dwg
Drawing Name	Wattle
Sheet	04/05/07 of