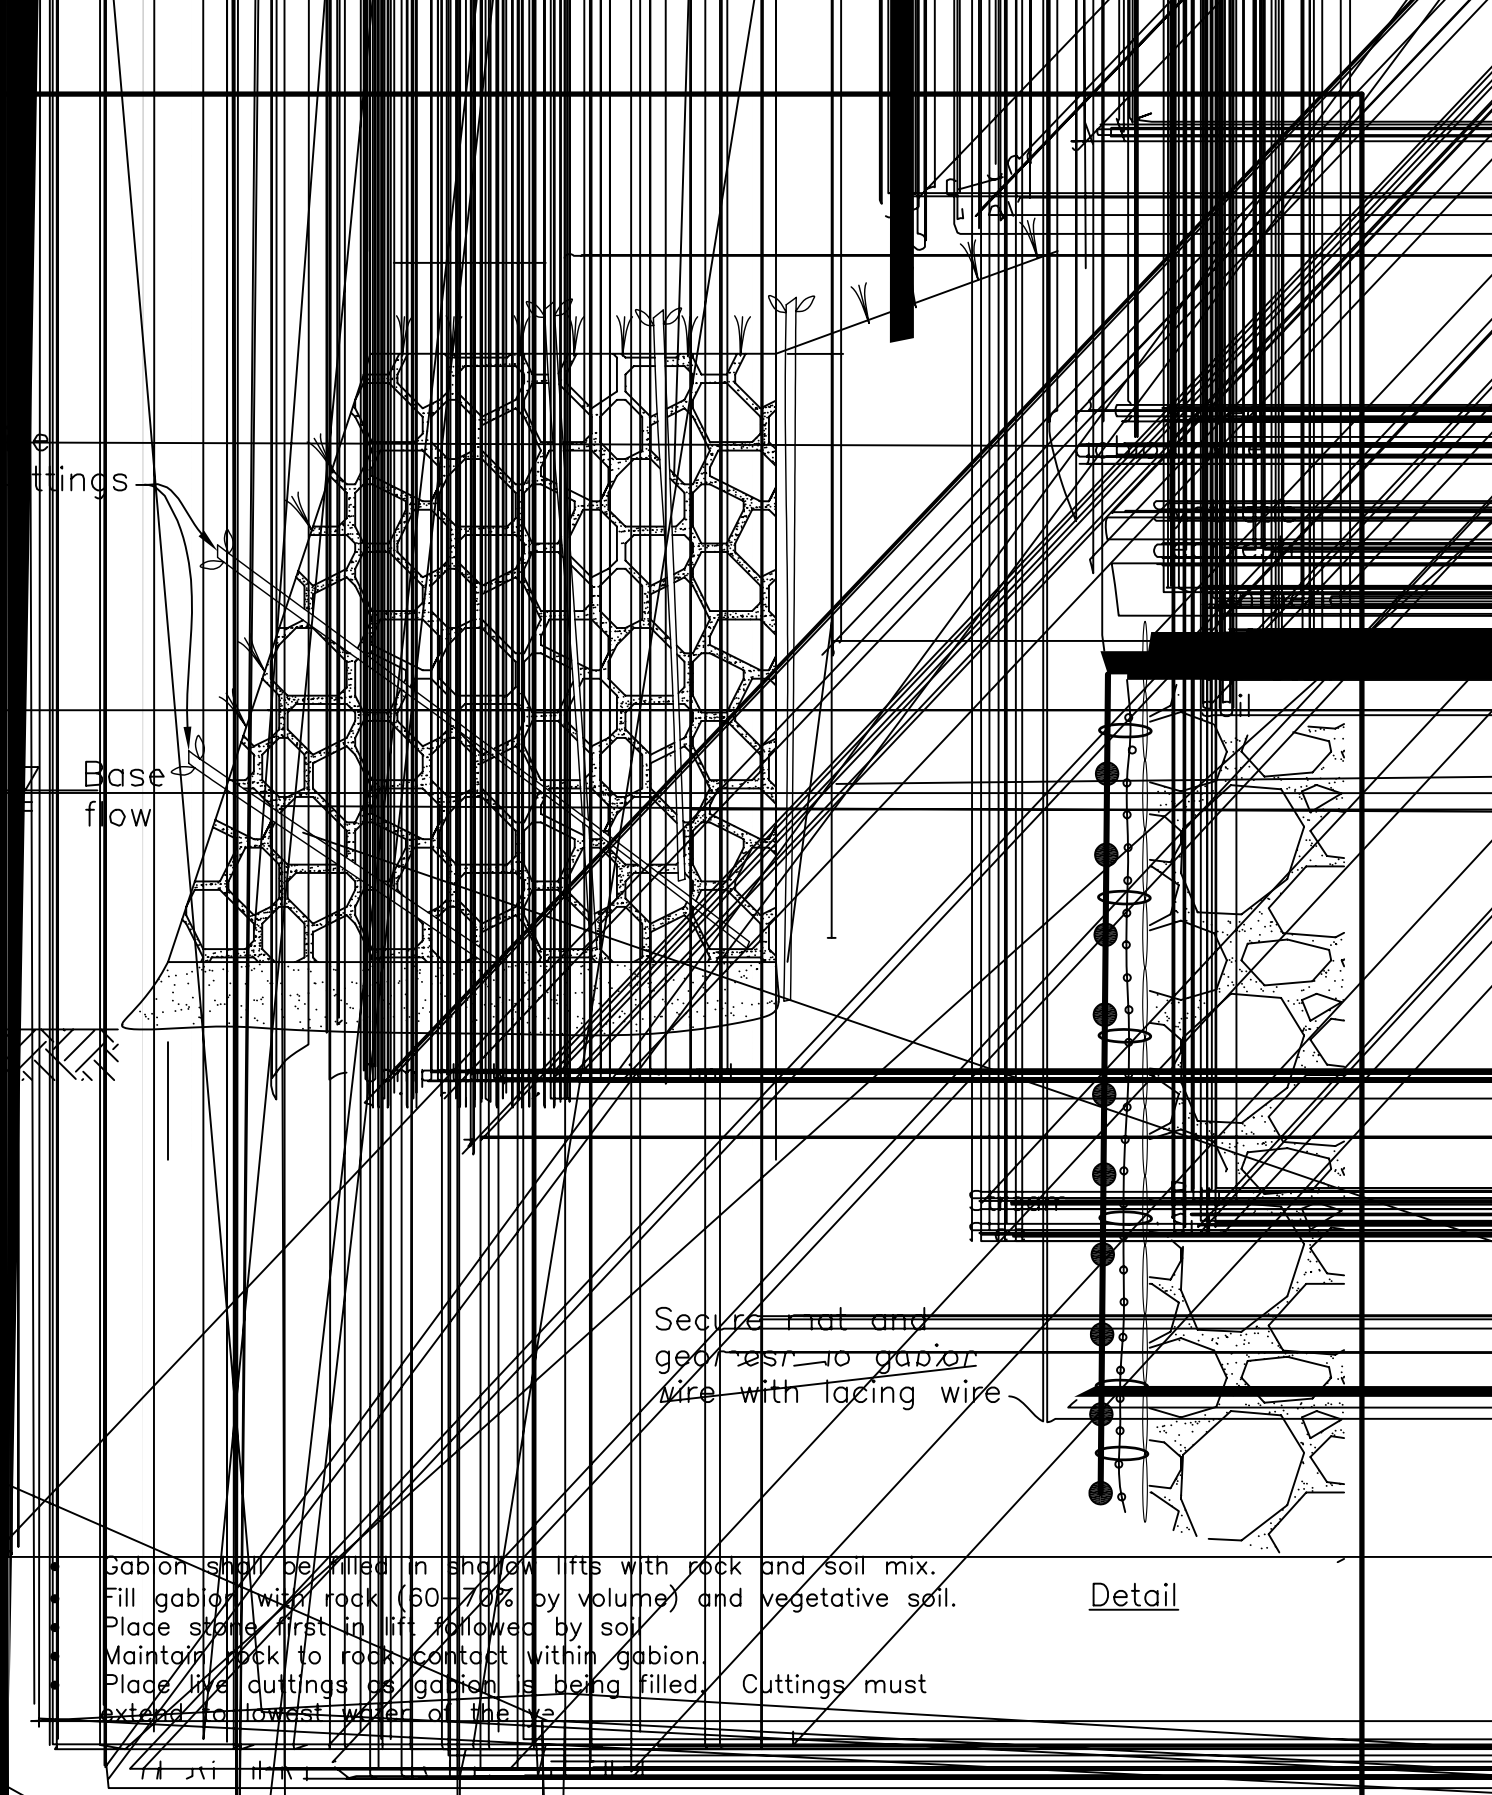

- Gabion shall be filled in shallow lifts with rock and soil mix.
- Fill gabion with rock (60–70% by volume) and vegetative soil.
- Place stone first in lift followed by soil.
- Maintain rock to rock contact within gabion.
- Place live cuttings as gabion is being filled. Cuttings must extend to lowest water of the year.

nceptual Plan Not for Construction

N.T.S.

NRCS
Natural Resources

Vegetated Green Gabion – Low Bank

*based on a modification of Maccaferi Green Gabion

Designed	Fripp, Robinson, Gullet	Date 04/07
Drawn	J. Renteria	04/07
Checked		
Approved		

File Name: Green–Gabion–Low.dwg

Drawing Name: Green–Gabion–Low–Bank

06/13/07

Sheet of