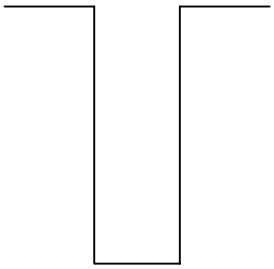

STEP 1

- Collect and soak wattling. Leave side branches. Wattling should be ¼ to 1in diameter, flexible, and 4 to 20 feet long.
- Collect and soak live cuttings. The cuttings should be 2 to 4 inch diameter and 3 to 5ft long.
- Excavate a trench 1 to 2 feet deep as shown on the plans.

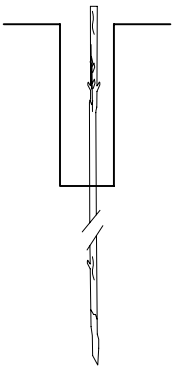

STEP 2

- Install live cuttings/stakes into the invert of the trench. The minimum depth should be 1ft. The tops should extend at least 2 inches above top of trench.
- Space stakes along a line at 1 to 2ft centers.

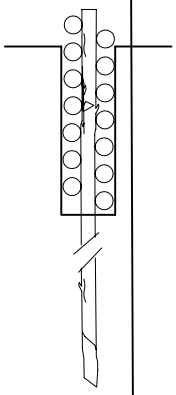

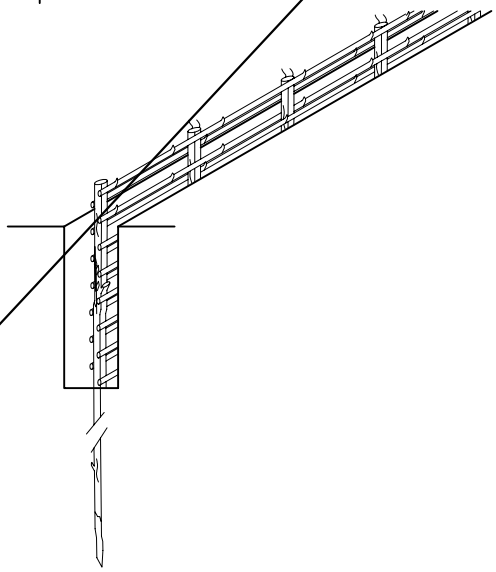

- Weave wattling in an alternat

Conceptual Plan - Not for Construction

N.T.S.

NRCS
Natural Resources Conservation Service
United States Department of Agriculture

Wattle

		Date	
Designed	J. Fripp, K. Worster	03/07	File Name Wattle.dwg
Drawn	J. Renteria	03/07	Drawing Name Wattle
Checked			04/05/07
Approved			